

CALIBRATING THE SCALES

Scale Calibration: Refer to the Vulcan scale manual for calibration and operation instructions. For your convenience, the instructions are summarized here.

Tare (zero out) the scale:

1. With the meter turned on, press the TARE button once. The “Tare”, “Lock”, and Channel “A” lights should be lit.
2. Use UP or DOWN arrows to zero out the tare weight.
3. Press the TARE button to record the TARE number to memory.

Calibrating the scale with weigh ticket from bulk tanker driver after loading:

1. With the spreader loaded and the meter turned on, press the CAL button once. The “Cal”, “Lock”, and Channel “A” lights should be lit.
2. The screen should show the initial calibration number of 2050.
3. Press the CAL button again.
4. Use UP or DOWN arrows to adjust the display to the known weight.
5. Press the CAL button to automatically adjust the CAL number and exit.